# RCA VICTOR MODELS T 8-16 and C 8-17

# Eight-Tube, Three-Band, A-C, Superheterodyne Receivers SERVICE NOTES

# **ELECTRICAL SPECIFICATIONS**

Frequency Ranges         Band X       140— 410 kc.         Band A       540— 1800 kc.         Band C       5700—18000 kc.
RADIOTRON COMPLEMENT  (1) RCA-6K7  (2) RCA-6L7  (3) RCA-6J7  (4) RCA-6K7  (5) RCA-6K6  (6) RCA-6F5  (7) RCA-6F6  (8) RCA-6F6  (9) RCA-5Z3  (1) Radio-Frequency Amplifier  Radio-Frequency Amplifier  First Detector  Intermediate Amplifier  Audio Amplifier  Power Output Amplifier
Voltage and Frequency
Rating A
Rating B
Power Consumption
Undistorted Output
Undistorted Output
Maximum Output
Voice Coil Impedance
Intermediate Frequency
Alignment Frequencies
Band X       .150 kc. (osc), 400 kc. (osc, det, ant)         Band A       .600 kc. (osc), 1720 kc. (osc, ant, det)         Band C       .18000 kc. (osc, ant, det)
MECHANICAL SPECIFICATIONS
MODEL T 8-16 MODEL C 8-17
Height       197/8 inches       39 inches         Width       16 inches       251/4 inches         Depth       113/4 inches       121/4 inches         Weight (Net)       35 pounds       52 pounds


# GENERAL FEATURES


These two instruments are alike in chassis construction and design. The table model employs an 8 inch loudspeaker while the console model uses a 12 inch unit. The following features are of outstanding interest:—

#### Metal Tubes

This receiver uses the new metal tubes which are

much smaller in size than the corresponding glass types. The high frequency efficiency of these metal tubes is greater, because of the shorter lengths of leads, lesser interelectrode capacitance and the more complete shielding of the metallic envelopes. Their rugged construction prevents breakage and reduces microphonic tendencies. The bases and sockets of all types have a standardized arrangement of connecting prongs.

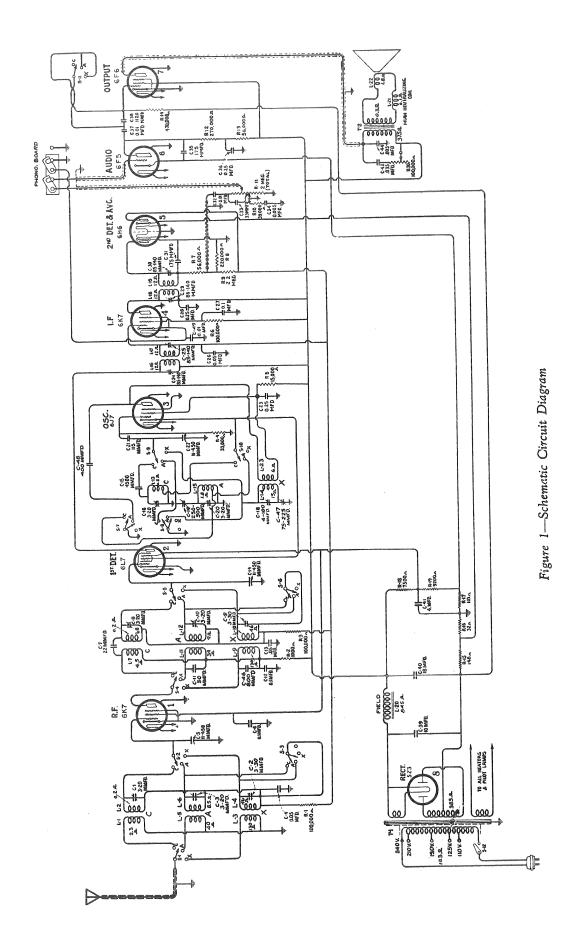

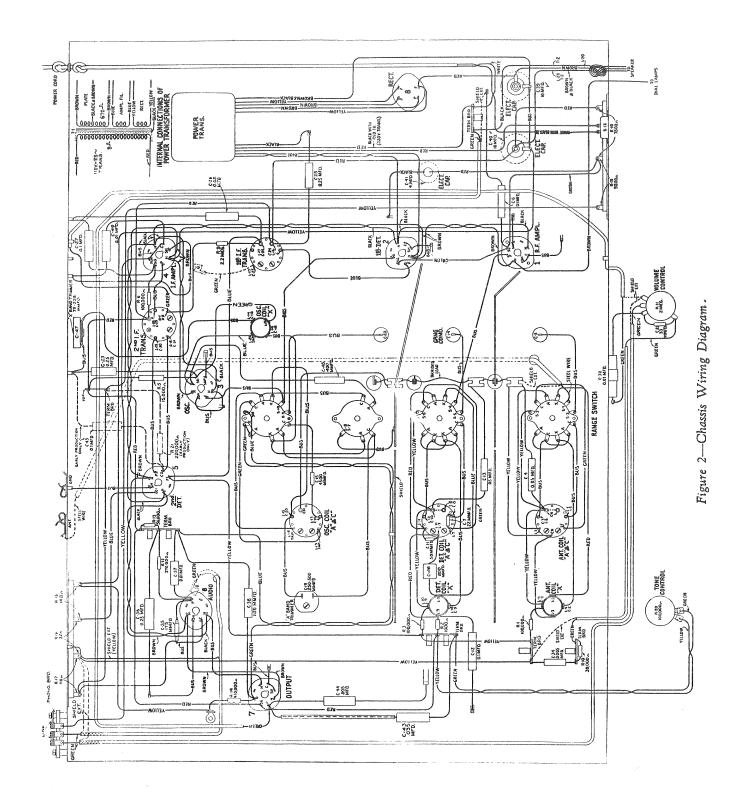

### Dial Drive

An open face airplane type of dial is used. Each scale has a band of color adjacent to its graduations and three short strips of corresponding colors at the lower part of the dial for index purposes. An index pointer, which moves as the band switch is rotated, points to one of these colors to identify the band in use. The drive mechanism is variable, there being either a 50 to 1 or 10 to 1 ratio available between the tuning knob and condenser drive shaft.

# Tuning Condenser

The variable tuning condenser is supported by a new design of shock-proof mount which has been developed by our engineers to prevent chassis vibration from producing audio frequency "howl".

# Plug-In Loudspeaker

A readily detachable plug type of connection is used in the chassis to loudspeaker cable. This permits ready removal for service.

# CIRCUIT FEATURES

The circuit is based upon the Superheterodyne principle. The three ranges of tuning are covered by three sets of coils. A single r-f stage provides the desired selectivity and gain ahead of the hexode first detector tube. The oscillator stage operates separately from the first detector. A single stage i-f system is employed. Its basic frequency is 460 kc. Diode detection is performed by a double diode RCA-6H6 Radiotron. Automatic volume control is provided by this same tube. The audio system consists of two stages, one an RCA-6F5, and the output, an RCA-6F6. High voltages for plate and bias supplies are obtained from an RCA-5Z3 full wave rectifier through an efficient filter. The field of the loudspeaker acts as a reactor in the filter circuit. Further details of the circuit are as follows:—

#### Oscillator

The oscillator circuit has extreme stability of frequency and good uniformity of output over the tuning ranges. These qualities assure that the tuning of the receiver will not drift as the supply line voltage fluctuates. The action of the circuit is such that when the cathode emission tends to change with line voltage or because of other reasons, the variation of voltage drop in the plate and screen resistor restores the operating characteristics of the tube to normal and thus maintains constancy of the generated signal.

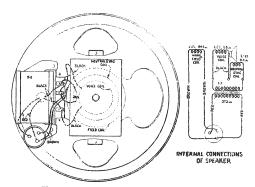


Figure 3-Loudspeaker Wiring

#### First Detector

This stage has unusually good high frequency mixing efficiency. The tube used, an RCA-6L7, is a new hexode type. The signal is supplied to the first control grid and the oscillator voltage is fed in on a second control grid, a screen grid separating the two. The arrangement of the grids prevents degenerative diffi-

culties, particularly at the higher frequencies. The second grid is direct-connected to the cathode of the oscillator and has no d-c bias.

# Compensated Volume Control

The variation in response of the human ear with different degrees of volume is compensated for by a resistor and condenser network in the manual volume control circuit. The volume control itself is an acoustically tapered potentiometer which provides equal changes of sound intensity for the listener per degree of rotation.

# Range Switch

The band change switch has several functions. It exchanges the antenna, detector and oscillator coils in order to select the range desired. At the same time, it shorts out the unused coils so as to eliminate their absorptive effects. It also varies the fidelity by shorting a coupling condenser in the audio system to provide the desired reproduction for short as well as long wave reception.

### Tone Control

Provision is included for variable reduction of high frequencies. This consists of a resistor and condenser combination across the primary winding of the output transformer, the resistor being the variable element. As it is decreased, the high frequency response limit is lowered.

# Power System

The power transformer has its primary winding capacitively shielded from its secondary windings to eliminate transfer of line disturbances into the receiver and to stop any tendency for the circuit to radiate into the line. Rectification is performed in the usual manner by a full wave tube.

## Detection and A.V.C.

The modulated signal as obtained from the output of the i-f system is detected by an RCA-6H6 double diode tube. The audio frequency secured by this process is passed on to the a-f system for amplification and final reproduction. The d-c voltage which results from detection of the signal is used for automatic volume control. This voltage, which develops across resistor R-8, is applied as automatic control grid bias to the r-f, first detector and i-f tubes through suitable resistance-capacitance filter circuits. The second diode of the RCA-6H6 is used to supply residual bias for

these controlled tubes under conditions of little or no signal. This diode, under such conditions, draws current, which flows through R-9 and R-8, thereby maintaining the desired minimum operating bias on such

tubes. On application of signal energy above a certain level, however, the auxiliary bias diode ceases to draw current and the a.v.c. diode takes over the biasing function.

# SERVICE DATA

The various diagrams of this booklet contain such information as will be needed for servicing the receiver. The ratings of all resistors, capacitors, coils, etc., are indicated adjacent to the symbols signifying these parts on the diagrams. The coils, reactors and transformer windings are rated in terms of their d-c resistances only and where the value is less than one ohm, no rating is given. Identification titles such as R-3, L-2, C-1, etc., are provided for reference between the illustrations and replacement parts list.

# Alignment Procedure

There are a total of fourteen adjustments necessary for obtaining proper alignment when such a process becomes necessary. Four of these are involved with the i-f system and the remainder are associated with the antenna, first detector and oscillator coils.

Correct performance of the receiver can only be obtained when the trimmer adjustments have been made by a skilled service man with the use of adequate and reliable test equipment. Such apparatus as may be required for this particular instrument is illustrated and described on a separate page of this booklet.

Two methods of alignment are applicable. One utilizes a Cathode-Ray Oscillograph as a means of output indication and the other follows former procedure where a glow type indicator or meter is used. The oscillographic method is much to be preferred, since greater accuracy is possible from the type of indication afforded. There are no approximations necessary as with the meter or aural method, but each adjustment can be made with excellent precision. Both methods are hereinafter outlined so that alignment operations may be made according to the equipment available.

It is wise to determine the necessity for alignment as well as the direction of misalignment before making adjustments. The RCA Tuning Wand is an instrument designed particularly for such a purpose.

The Tuning Wand consists of a bakelite rod having a small brass cylinder at one end and a core of finely divided iron at the other. It may be inserted into a tuned coil while a signal of the normal resonant frequency is being supplied to such coil to obtain an indication of the tuning. Holes are provided at the top of the r-f shield cans for entrance of the Wand. The presence of either end of the Wand will cause a change in tuning which will be indicated at the receiver output as an increase or decrease in signal level. If there is a decrease of output when either end is inserted, the tuning is correct and will require no adjustment. However, should there be an increase of output due to the iron core and decrease with the brass cylinder, an increase in inductance or capacitance is indicated as necessary to bring the circuit into line. The trimmer involved should therefore be increased accordingly. If the brass cylinder end causes an increase in output while the iron end causes a decrease, reduction of inductance will be necessary to place the circuit in alignment. This is equiva-

lent to decreasing the trimmer concerned. The following tabulation gives the various changes and the adjustments required:—

WAND	SIGNAL	TRIMMER
	Decrease}Decrease	
Brass Iron.		Decrease
{Brass Iron	Decrease	Increase

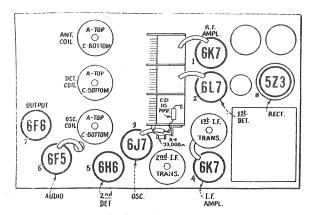


Figure 4—Coil and Radiotron Locations

# (I) CATHODE-RAY ALIGNMENT Equipment

A standard source of the specified alignment frequencies is required. Such a source should consist of an RCA Full Range Oscillator, Stock No. 9595. Output indication should be by means of an RCA Stock No. 9545 Cathode-Ray Oscillograph. An RCA Stock No. 9558 Frequency Modulator will be needed to sweep the generated signal and synchronize it with the Oscillograph in order to make possible the visual representation of the resonant characteristic of the circuit being tuned on the cathode-ray fluorescent screen.

## I-F Trimmer Adjustments

The four trimmers of the two i-f transformers are located as shown by Figure 6. Each must be aligned to a basic frequency of 460 kc. The last transformer must be aligned firstly and the first transformer aligned secondly. For such a process, it is necessary to feed the output of the Full Range Oscillator to the stages in their order of alignment, adjusting the trimmers of each transformer and observing the effect at the second detector output on the Cathode-Ray Oscillograph. The proper point of connection of the Oscillograph is with its vertical "high" input terminal attached to the juncture of R-7, R-8 and R-9 as illustrated in Figure 6, and with the "0" or ground terminal to the chassis. The "Ext. Sync." terminals of the Oscillograph should be connected to the Frequency Modulator as shown by

Figure 5. A .001 mfd. capacitor installed in series with the Oscillator "Ant." lead will prevent the voltages of the stage under alignment from becoming upset. The vertical "A" amplifier should be "On" for the ensuing adjustments and the gain control kept at its maximum position. For each adjustment, the Oscillator output need be regulated so that the image obtained

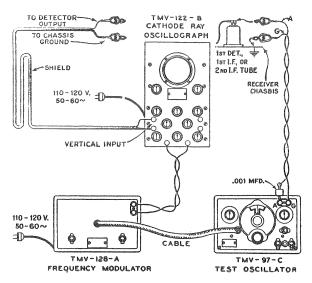


Figure 5—Alignment Apparatus Connections

on the Oscillograph screen will be of sufficient size as to be accurately observable. Proceed further as follows:—

- (a) Place the receiver, Oscillograph and test Oscillator in operation. Set the receiver range switch to Band "A" and tune the station selector to a point where no interference will be picked up, shorting the antenna and ground terminals if necessary. Set the Oscillograph horizontal "B" amplifier to "Timing" and control its gain so that the luminescent spot sweeps a straight line trace completely across the screen. Place the timing control to "Int." Adjust the intensity and focusing controls of the Oscillograph to produce the correct size and strength of the spot.
- (b) Attach the output of the test Oscillator between the control grid cap of the RCA-6K7 i-f tube and chassis ground as shown typically by Figure 5. Tune the Oscillator to 460 kc. and set its modulation switch to "On". Regulate its output until the signal produces a wave pattern on the Oscillograph screen, adjusting the Oscillograph controls to give the desired number of cycles. Cause the image to stand still on the screen by manipulation of the frequency and synchronizing controls. Then carefully tune the two trimmers C-29 and C-30 of the second i-f transformer to produce maximum amplitude (vertical deflection) of the oscillographic image. Under this condition the transformer will be sharply resonated to 460 kc.
- (c) The Frequency Modulator should then be placed

in operation and interconnected with the Full Range Oscillator by means of the special shielded patch cord. Figure 5 shows the proper arrangement. Set the Frequency Modulator sweep range switch to its "Lo" position and turn the Oscillator modulation switch to "Off". Change the timing control of the Oscillograph to "Ext." and place the range switch to its No. 2 position. Then carefully shift the tuning of the Oscillator so as to increase its frequency, until two distinct and similar waves appear on the Oscillograph screen and become exactly coincident at their highest points. These curves will be found to occur at an Oscillator setting of approximately 540 kc. They will be identical in shape but appearing in reversed positions. Adjust the frequency control of the Oscillograph in order to cause the waves to conform with the above requirements and to make them remain motionless on the screen. This will require a setting of approximately ½ clockwise rotation of the frequency control. The trimmers C-29 and C-30 should then be re-adjusted so that the two curves move together and become exactly coincident throughout their lengths, maintaining the maximum amplitude at which this condition can be brought about.

(d) Leaving the equipment connected and adjusted as in (c), change the Oscillator output to the control grid cap of the RCA-6L7 first detector tube. Then adjust the first if transformer trimmers C-24 and C-25 so that the forward and reverse waves appearing on the Oscillograph coincide throughout their lengths and have maximum amplitude. The shape of the composite wave obtained from this operation is a true representation of the overall tuning characteristic of the i-f system. Each trimmer of the entire group should then be checked to assure that it is in correct alignment as indicated by the degree of coincidence and relative amplitude of the image on the Oscillograph screen.

# R-F Trimmer Adjustments

Locations of the various antenna, detector and oscillator coil trimmers are shown by Figure 6. The test Oscillator should be removed from connection with the i-f system and its output connected to the antennaground terminals of the receiver. No changes are to be made in the connections of the Oscillograph at the second detector. During the following adjustments, the Oscillator output should be regulated as often as is necessary to keep the oscillographic image as low as is practically observable. Adherence to such a procedure will obviate the broadness of tuning that would result from a.v.c. action on a stronger signal. Proceed with the adjustments as follows:—

#### Calibration

Set the receiver range switch to Band A and rotate the station selector until the tuning condenser plates are in full mesh (maximum capacitance). Then move the main dial pointer until it points exactly to the horizontal line at the low frequency end of the Band A scale.

# Band A

- (a) With the receiver range switch in its Band A position, tune the station selector until the dial pointer is at a reading of 1720 kc. Adjust the test Oscillator to 1720 kc. (modulation "On" and Frequency Modulator disconnected) and increase its output to produce a registration on the Oscillograph. Carefully align the oscillator, detector and antenna trimmers C-20, C-10 and C-3 respectively, so that each brings about maximum amplitude of output as shown by the wave on the Oscillograph. It will be necessary to have the timing control of the Oscillograph on "Int." for this operation. After each trimmer has been peaked, the Oscillograph timing control should be set to "Ext." and the Frequency Modulator placed into operation with its connections to the Oscillator and Oscillograph made in accordance with Figure 5. Turn the modulation switch of the Oscillator to "Off" and retune the Oscillator (increase frequency) until the forward and reverse waves show on the Oscillograph and become coincident at their highest points. Adjust the trimmers C-20, C-10 and C-3 again, setting each to the point which
- produces the best coincidence and maximum amplitude of the wave images.
- (b) Remove the Frequency Modulator cable from the Oscillator and shift the signal frequency to 600 kc. Place the modulation switch to "On". Tune the receiver to pick up this signal, disregarding the dial reading at which it is best received. Then insert the Frequency Modulator plug and retune the Oscillator (modulation "Off") until the two similar forward and reverse waves appear on the screen. For this adjustment, it is advisable to shift the Oscillator to its 200-400 kc. range and use the third harmonic of the generated signal in order to obtain the desired range of sweep. The oscillator series trimmer C-19 should then be adjusted to produce maximum amplitude of the images. No rocking will be necessary on the station selector inasmuch as the signal frequency is being "wobbled" by the Frequency Modulator to produce the same effect.

After completing this adjustment the trimmer C-20 should be re-aligned as in (a) to correct for any change brought about by the adjustment of C-19.

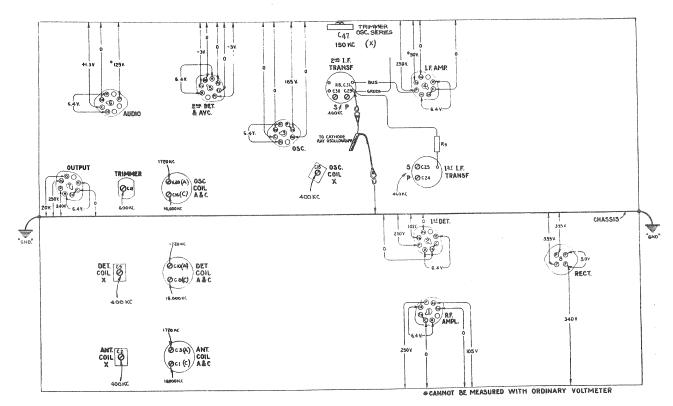


Figure 6—Trimmer Locations and Radiotron Socket Voltages
Measured at 115 volts A.C.—No Signal—Volume Control Maximum

#### Band X

- (a) Disconnect the Frequency Modulator and tune the test Oscillator to a frequency of 400 kc. (Modulation "On"). Place the receiver range switch to its Band X position and tune the station selector until the dial pointer reads exactly 400 kc. Adjust the Oscillograph timing control to "Int." Then align each of the trimmers C-18, C-9 and C-2 to the point producing maximum output at the Oscillograph. Place the Frequency Modulator in operation and attach it to the test Oscillator by means of the shielded cable. Change the Oscillograph timing to "Ext." Increase the frequency of the Oscillator (Modulation "Off" until the two forward and reverse waves appear and become coincident at their highest point, approximately at 462 kc. These waves may be made to remain stationary on the screen by manipulation of the Oscillograph range switch (No. 2 position) and frequency control (mid-position). Re-adjust the three trimmers C-18, C-9 and C-2 to give maximum amplitude and complete coincidence of the waves.
- (b) Change the test Oscillator so that it delivers a signal of 150 kc. with the Frequency Modulator disconnected. Tune this signal on the receiver, which should be set to the Band X setting, disregarding the dial reading at which the signal is best received. Then interconnect the Frequency Modulator with the Oscillator and retune the latter to the point at which the two similar waves appear on the screen. Adjust the trimmer C-47 for maximum amplitude of the wave images. Rocking of the tuning condenser will not be necessary for this operation as such is duplicated by the Frequency Modulator. Repeat the alignment of C-18 as in (a) to correct for any error brought about by the adjustment of C-47.

## Band C

- (a) Turn the range switch of the receiver to its Band C position and tune the station selector until the dial pointer reads 18,000 kc. Set the test Oscillator to the same frequency (modulation "On" and Frequency Modulator disconnected) and regulate its output to the level required for convenient observation. Adjust the trimmer C-16 to the point producing maximum output as indicated on the Oscillograph. Check for the presence of the proper "image" signal by tuning the receiver to 17,080 kc. The 18,000 kc. signal of the Oscillator will be received at this point if the adjustment of C-16 has been properly made using the position of least capacitance which gives maximum receiver output. It may be necessary to increase the output of the Oscillator in order to get an indication of the "image". No adjustments should be made during this check.
- (b) Return the receiver tuning to 18,000 kc., realign C-16 if necessary, and then adjust the detector and antenna trimmers, C-8 and C-1, for maximum signal output as evidenced by the

oscillographic image. No further adjustments are to be made on this band.

# (2) ALIGNMENT WITH OUTPUT METER

To align the receiver by means of an output indicator other than a Cathode-Ray Oscillograph will require the use of a standard test Oscillator such as that recommended above for the source of signals and means of indication for the output. The RCA Neon Output Indicator, Stock No. 4317 will be found very satisfactory for such use. It should be connected

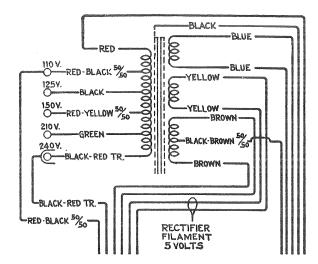


Figure 7—Universal Power Transformer Connections
Pri. Res.—10.3 Ohms, Total
Sec. Res.—383 Ohms, Total

across the voice coil circuit of the loudspeaker or across the output transformer primary.

#### I-F Alignment

Connect the test Oscillator to the control grid cap of the i-f tube. Advance the volume control of the receiver to its full-on position. Tune the test Oscillator accurately to 460 kc, and align the trimmers C-29 and C-30 to give maximum receiver output. Regulate the Oscillator output during this adjustment so that the output indication is as small as can be conveniently observed. After completing the adjustments of these trimmers, re-connect the Oscillator so that it will feed into the control grid circuit of the RCA-6L7 first detector. Then tune the first i-f transformer trimmers C-24 and C-25 for maximum receiver output.

# R-F Alignment

After completing the i-f adjustments, it is advisable to correct the line-up of the circuits ahead of the first detector. The test Oscillator should be connected to the antenna-ground terminals of the receiver and the manual volume control kept at its maximum position. For each adjustment the Oscillator output should be maintained as low as possible in order to avoid broadness of tuning which would result from a.v.c. action on a stronger signal. Band A should be aligned by supplying a 1720 kc. signal to the receiver, tuning the station selector to a dial reading of 1720 and adjusting the trimmers C-20, C-10 and C-3 to produce

maximum receiver output. The Oscillator should then be shifted to 600 kc. and the receiver tuned to resonate this signal, disregarding the reading at which it is best received. Trimmer C-19 must then be adjusted, simultaneously while rocking the station selector backward and forward through the signal until the maximum output results from the combined operations. C-20 should be rechecked to assure that its adjustment has not changed because of the trimming of C-19. Band X must be aligned at 400 kc. and 150 kc. Tune the test Oscillator to 400 kc. and turn the receiver dial to the same reading. Adjust trimmers C-18, C-9 and C-2 for maximum (peak) receiver output. Then shift the Oscillator to 150 kc. and tune the receiver to pick up this signal, disregarding the dial reading at which it is best received. Adjust trimmer C-47, simultaneously rocking the tuning condenser backward and forward through the signal, until maximum receiver output results from the combined operations. Repeat the alignment of C-18 as above to correct for any change which may have been caused by the adjustment of C-47. Change the receiver so that it is operative and the dial reads 18,000 kc. on the "C" Band. Tune the test Oscillator to this same frequency. Then adjust the oscillator trimmer C-16 to produce maximum (peak) output. Two positions of this trimmer will be found which conform with this requirement. The one of least capacitance is correct. Check for the presence of "image" response at 17,080 kc. by shifting the receiver tuning. If it is received at such a point, the trimmer C-16 has been correctly adjusted to the right peak. No adjustments are to be made during this check. Tune the receiver back to the 18,000 kc. dial marking, re-adjust C-16 if necessary,

and then tune the detector and antenna capacitors C-1 and C-8 for maximum receiver output. No further adjustments are necessary.

# Radiotron Socket Voltages

The voltage values indicated from the Radiotron socket contacts to chassis on Figure 6 will serve to assist in the location of causes for faulty operation. Each value as specified should hold within ± 20% when the receiver is normally operative at its rated supply voltage. Variations in excess of this limit will usually be indicative of trouble in the basic circuits. The voltages given are actual operating values and do not allow for inaccuracies which may be caused by the loading effect of a voltmeter's internal resistance. This resistance should be duly considered for all readings. The amount of circuit resistance shunting the meter during measurement will determine the accuracy to be obtained, the error increasing as the meter resistance becomes comparable to or less than the circuit resistance. For the majority of readings, a meter having an internal resistance of 1000 ohms per volt will be satisfactory when the range used for each reading is chosen as high as possible consistent with good readabil-

# Universal Transformer

The transformer used on some models of these receivers is adaptable to several ranges of voltage as given under rating C of Electrical Specifications. Its schematic and wiring are shown by Figure 7. Terminals are provided at the top of the transformer case for changing the primary connections to suit the voltage being used.

# REPLACEMENT PARTS

Insist on genuine factory tested parts, which are readily identified and may be purchased from authorized dealers.

RECEIVER ASSEMBLIES	Sтоск No.	Description	List Price	Ѕтоск No.	Description	List Price
	5237 11350 11223 11256 11292 11321 11329 11289 11291 5116 11290 11269 4409 11287 4868 4838 4624 4858	Bracket—Volume control or high frequency tone control mounting bracket.  Bushing—Variable tuning condenser mounting bushing assembly—Package of 3.  Cap—Contact cap—Package of 5.  Capacitor—Adjustable capacitor (C19).  Capacitor—22 MMfd. (C7).  Capacitor—33 MMfd. (C33).  Capacitor—50 MMfd. (C11).  Capacitor—175 MMfd. (C21).  Capacitor—175 MMfd. (C35).  Capacitor—400 MMfd. (C48).  Capacitor—800 MMfd. (C48).  Capacitor—120 MMfd. (C38).  Capacitor—100 MMfd. (C38).  Capacitor—0.005 Mfd. (C34).  Capacitor—0.005 Mfd. (C34).  Capacitor—0.01 Mfd. (C32).  Capacitor—0.01 Mfd. (C32).  Capacitor—0.01 Mfd. (C37).	.43 .20 .46 .48 .24 .26 .26 .24 .18 .25 .30 .30 .20 .20 .54	4885 5170 11248 11240 5212 11272 4748 5215 11325 5216 11326 5217 11327	Capacitor—0.1 Mfd. (Č6, C12, C27) Capacitor—0.25 Mfd. (C23, C28, C36) Capacitor—4 Mfd. (C41) Capacitor—10 Mfd. (C39) Capacitor—18 Mfd. (C40) Clamp—Antenna cable clamp—Located near antenna terminal Clamp—Capacitor mounting clamp assembly—for stock #11248 Coil—Antenna coil (A and C Bands)—(L1, L2, L5, L6, C1, C3) Coil—Antenna coil (X Band)—(L3, L4, C2) Coil—Detector coil (A and C Bands)—(L7, L8, L11, L12, C8, C10) Coil—Detector coil (X Band)—(L9, L10, C9) Coil—Oscillator coil (A and C Bands)—(L13, L15, C16, C20) Coil—Oscillator coil (X Band)—(L14, C18) Condenser—3-Gang variable tuning con-	.28 .25 1.06 1.08 1.16 .10 .15 2.32 1.56 2.34 1.60 2.20 1.44

# REPLACEMENT PARTS—CONT'D

No.   Description   Paice   No.   Description   Lists   Description   Lists   The Control.—Right frequency tone control   (R.20)   Control.—Right frequency tone control   Control.—Right frequency tone	STOCK		Lier	STORE		1 -
1227   Name   Control   CR(11)		Description	LIST PRICE	STOCK No.	Description	LIST PRICE
1972   1972	11238	Tone Control—High frequency tone control		4377	Spring—Band indicator operating arm and	
Jampstage of 5   1.20	11237	(K20)	\$0.96		-Package of 5	80.25
1245   1246   1247   1248   1249		Lamp—Dial lamp—Package of 5	1.20	4378	Stud-Band indicator operating arm stud	\$0.23
Pinte—R.F. or 1.F. coll shield locking plate—  11244   Resistor—Voltage divider resistor, comprising one 7900 ohm and one 9200 ohm and one 9200 ohm and one 13 ohm and one 14 ohm and on		Lead—Shielded lead for antenna			and nut assembly—Package of 5	.25
Resistor—Voltage divider resistor, compris-   no no 7900 ohm and one 9200 ohm   section—(R18, R19)   1.08   11347   11347   11347   11348   11346   11346   11347   11347   11346		Plate—R.F. or I.F. coil shield locking plate—		es constant de la con	MISCELLANEOUS ASSEMBLIES	TOTAL CANADA
1245   Resistor—Voltage divider resistor, comprising one 148 shim, one 32 ohm and one 15112   100 class section—(R15, R16, R17)	11244	Resistor—Voltage divider resistor, compris-	12		Escutcheon—Station selector escutcheon	70
Resistor—Voltage divider resistor, comprise may be contained to make the contained may be containe	11045	section—(R18, R19)	1 08		Glass—Station selector dial glass	.30
Second   Resistor—1000 Ohm—Carbon Type—14   Resistor—13,000 Ohm—Carbon Type—14   Resistor—14,000 Ohm—Carbon Type—14   Re	11247	Resistor—Voltage divider resistor, compris- ing one 148 ohm, one 32 ohm and one	1.00		Knob-Volume control, tone control, range	.75
13104	5112	Kesistor—1000 Ohm—Carbon Type—1/4	.62	11046	Of 5	.75
13100	5114	Resistor—15,000 Ohm—Carbon Type—1	1.00		assembly—Package of 2	.76
Watt—(R4)—Package of 5.   7.5   11210   11322   Resistor—30.00 Ohm—Carbon Type—1/4   Watt—(R10)—Package of 5.   1.00   11348   11348   11323   Resistor—10.00 Ohm—Carbon Type—1/4   1.00   11349   1.00   11349   1.00   11349   1.00   11349   1.00   11349   1.00   11349   1.00   11349   1.00   11349   1.00   11349   1.00   11349   1.00   11349   1.00   11349   1.00   11349   1.00   1.0	11300	Resistor—33,000 Ohm—Carbon Type—140	.22		Package of 5	.34
Watt—(R10)—Package of 5.	11322	Watt—(R4)—Package of 5	.75		Package of 4	
Watt—(R13)—Package of 5	5029	Watt—(K10)—Package of 5	1.00	11348	point set screw for knob, stock #11346—	.20
Watt—(R1. R3. R6.)—Package of \$	3118	Watt—(K13)—Package of S	1.00	11349	Package of 10	.32
Watt—(R12)—Package of 5, 19pe—14   1.00		Watt—(R1, R3, R6)—Package of 5	1.00		#11347—Package of 5	.15
Watt—(R14)—Package of 5.   1.00   11232   11231   11232   11233   11		Watt—(K12)—Package of 5	1.00		REPRODUCER ASSEMBLIES	nimer apparatus
Solid		Watt—(K14)—Package of 5	1.00			La constante de la constante d
Solicy   Shield — Antenna, detector or oscillator coil   Shield — Intermediate frequency transformer mounting bracket — Output transformer mount		Watt—(R9)—Package of 5	1.00		Clips	19
1273   Shield—Intermediate frequency transformer   Shield   Scoket—Dial lampsocket.   18   11234   11234   11235   Socket—Acceptance for the first producer consequency transformer—Intermediate frequency transformer—First intermediate frequency transformer—Clifs, Lify, C24, C27).   2.75   11234   11235   11236   112	-	shield	.20		Bolt—Yoke and core assembly bolt and nut.  Bracket—Output transformer mounting	.16
11272   Shield—Rectifier Radiotron shield.		Shield—Intermediate frequency transformer shield		11257	Clamp—Cone center suspension clamping	.14
Application		Shield-Rectifier Radiotron shield		11284	nut and screw assembly—Package of 5	.25
1313		Socket—Dial lamp socket			Coil—Neutralizing coil (121)	2.00
11236   Socket—7-contact Radiotron socket		Socket—5 contact Radiotron socket			Cone—Reproducer cone—(L22)—Package	.30
Switch—Band switch (\$1, \$2, \$3, \$4, \$5, \$5, \$7, \$8, \$9, \$10, \$11133   Switch—Power switch—(\$12)		Socket—7-contact Radiotron socket		2110	Of 7	3.50
Switch—Power switch—(Si2)	11236	Switch—Band switch (S1, S2, S3, S4, S5, 1		5119	Connector—3 contact female connector for	
Terminal—Antenna terminal clip assembly   Transformer—First intermediate frequency transformer (L16, L17, C24, C25)   2.17   Transformer—Second intermediate frequency transformer—CL18, L19, C29, C30, C31, R7, R8)   2.72   Transformer—Power transformer—105-125 volts—50-60 cycles (T1)   4.56   Transformer—Power transformer—105-125 volts—50-60 cycles (T1)   4.56   Transformer—Power transformer—1010-130, 140-160, 195-250 volts—40-60 cycles   4.64   Transformer—Power transformer—100-130, 140-160, 195-250 volts—40-60 cycles   4.64   Transformer—Output transformer mounting bracket   11231   Boll—Steel ball—Used with winding shaft—Blacket—Output transformer mounting bracket   11252   Clutch—Tuning condenser drive shaft, balls, ring, spring and washers—assembled   1.00   Dial—Dial scale   1.0		Switch—Power switch—(S12)		5118	Connector—3 contact male connector for re-	.25
11239 Transformer—First intermediate frequency transformer (L16, L17, C24, C25)  Transformer—Second intermediate frequency transformer—(L18, L19, C29, C30, C31, R7, R8)  Transformer—Power transformer—105-125 volts—25-60 cycles (T1)  Transformer—Power transformer—105-125 volts—25-60 cycles (T1)  Transformer—Power transformer—100-130, 140-160, 195-250 volts—40-60 cycles  DRIVE ASSEMBLIES  Arm—Band indicator operating arm  Ball—Steel ball—Used with winding shaft—Package of 20  Clutch—Tuning condenser drive clutch assembly—comprising drive shaft, balls, ring, spring and washers—assembled  Dial—Dial scale  Drive—Variable tuning condenser drive assembly—comprising indicator pointer. Indicator—Station selector indicator pointer. Indicator—Station selector indicator pointer assembly—comprising indicator operating arm—Package of 10  Screw—No. 6-32-7/32" square set screw for band indicator operating arm—Package of 10  Screw—No. 8-32-7/32" square set screw for band indicator operating arm—Package of 10  Screw—No. 8-32-7/32" square set screw for band indicator operating arm—Package of 10  Screw—No. 8-32-7/32" square set screw for band indicator operating arm—Package of 10  Screw—No. 8-32-7/32" square set screw for band indicator operating arm—Package of 10  Screw—No. 8-32-7/32" square set screw for band indicator operating arm—Package of 10  Screw—No. 8-32-7/32" square set screw for band indicator operating arm—Package of 10  Screw—No. 8-32-7/32" square set screw for band indicator operating arm—Package of 10  Screw—No. 8-32-7/32" square set screw for band indicator operating arm—Package of 10  Screw—No. 8-32-7/32" square set screw for variable condenser drive assembly—Package of 10  Screw—No. 8-32-7/32" square set screw for variable condenser drive assembly—Package of 10  Screw—No. 8-32-7/32" square set screw for variable condenser drive assembly—Package of 10  Screw—No. 8-32-7/32" square set screw for variable condenser drive assemble assemble assemble ass		Terminal—Antenna terminal clip assembly.		0610	producer	.25
Transformer—Second intermediate frequency transformer—(L18, L19, C29, C30, C31, R7, R8)	11210	transformer (116 117 C24 C25)			Transformer—Output transformer—(T2)	6.40
transformer—(L18, L19, C29, C30, C31, R7, R8).  Transformer—Power transformer—105-125 volts—50-60 cycles (T1). Transformer—Power transformer—105-125 volts—25-60 cycles.  Transformer—Power transformer—100-130, 140-160, 195-250 volts—40-60 cycles.  DRIVE ASSEMBLIES  DRIVE ASSEMBLIES  Arm—Band indicator operating arm Ball—Steel ball—Used with winding shaft—Package of 20  Clutch—Tuning condenser drive clutch assembly—comprising drive shaft, balls, ring, spring and washers—assembled. Dial—Dial scale	11239	Transformer—Second intermediate frequency	2.15		Washer—"Binders board" "C" washer—	1.56
Transformer—Power transformer—105-125 volts—50-60 cycles (T1)		transformer—(L18, L19, C29, C30, C31, 1			used to hold field coil securely—Package	
volts—50-60 cycles (T1)	11241	R7. R8)	2.72		of )	.18
Transformer—Power transformer—105-125 volts—25-60 cycles  Transformer—Power transformer—100-130, 140-160, 195-250 volts—40-60 cycles  DRIVE ASSEMBLIES  Arm—Band indicator operating arm Ball—Steel ball—Used with winding shaft—Package of 20 Clutch—Tuning condenser drive clutch assembly—comprising drive shaft, balls, ring, spring and washers—assembled Drive—Variable tuning condenser drive assembly comprising indicator pointer. Indicator—Station selector indicator pointer, arm, link and stud.  Screw—No. 6-32-5/32" square set screw for band indicator operating arm—Package of 10.  Screw—No. 8-32-5/32" set screw for band indicator operating arm—Package of 10.  Screw—No. 8-32-5/32" set screw for band indicator operating arm—Package able condenser drive assembly—Package for volume transformer—Mount transformer mounting bracket—Output transformer mounting nut and screw assembly—Package of 5.  Coil—Field coil—L20  Coil—Hum neurrazizing coil—L21  Connector—3-contact male connector for reproducer cable  Connector—3-contact female connector plug for reproducer cable  Transformer—Power transformer—To  National diversities and vice like with two lead wire clips  Screw—No. 6-32-5/32" square set screw for band indicator operating arm—Package of 10.  25		volts—50.60 cycles (T1)	456		D D D D V C D D V C D D D D D D D D D D	
Transformer—Power transformer—100-130, 140-160, 195-250 volts—40-60 cycles  DRIVE ASSEMBLIES  Arm—Band indicator operating arm	11242	Transformer—Power transformer—105-125	4.70			
140-160, 195-250 volts—40-60 cycles  DRIVE ASSEMBLIES  Arm—Band indicator operating arm Ball—Steel ball—Used with winding shaft—Package of 20  Clutch—Tuning condenser drive shaft, balls, ring, spring and washers—assembled Drive—Variable tuning condenser drive assembly Drive—Variable tuning condenser drive assembly Indicator—Station selector indicator pointer, arm, link and stud Screw—No. 6-32-5/32" square set screw for band indicator operating arm—Package of 10.  Screw—No. 8-32-5/32" set screw for variable condenser drive assembly—Package of able condenser drive assembly—Package able dole drive clips—Lad wire clips—Cladwire clip	11243	Transformer—Power transformer—100.120	6.52		Console Model	
DRIVE ASSEMBLIES  Arm—Band indicator operating arm. Ball—Steel ball—Used with winding shaft— Package of 20. Clutch—Tuning condenser drive clutch assembly—comprising and washers—assembled. Drive—Variable tuning condenser drive assembly Comprising indicator pointer. Indicator—Station selector indicator pointer. Indicator—Band indicator operating arm—Package of 10. Screw—No. 6-32-5/32" square set screw for band indicator operating arm—Package of 10. Screw—No. 8-32-5/32" set screw for varies able condenser drive assembly—Package of 2.  DRIVE ASSEMBLIES  11231 Bolt—Yoke and core assembly blot and nut. Bracket—Output transformer mounting bracket  Clamp—Cone center suspension clamping nut and screw assembly—Package of 5. Coil—Field coil—L20. Coil—Hum neucratizing coil—L21. Cone—Reproducer cone—L22—Package of 5. Connector—3-contact male connector for reproducer. Connector—3-contact female connector plug for reproducer—Complete Transformer—Output transformer—T2. Washer—"Binders board" "C" washer used to hold field coil assembly.  1.8  3993 Screw—No. 8-32-5/32" set screw for varies able condenser drive assembly—Package of 10.  25  26  27  28  11257  11257  11258  1258  11259  1259  1250  1250  1250  1250  1251  1251  1252  1253  1253  1253  1253  1253  1253  1253  1253  1253  1254  1255  1256  1257  1258  1259  1259  1250  1250  1250  1250  1251  1251  1252  1253  1253  1253  1253  1253  1253  1253  1253  1254  1255  1255  1256  1257  1257  1258  1259  1259  1259  1250  1250  1250  1250  1250  1251  1251  1251  1252  1253  1253  1253  1253  1253  1253  1254  1255  1255  1256  1257  1257  1258  1259  1259  1259  1250  125		140-160, 195-250 volts—40-60 cycles	4.64	11232	Board—Terminal board assembly with two	
Arm—Band indicator operating arm Ball—Steel ball—Used with winding shaft—Package of 20		•		11231	lead wire clips	.18
All—Steel ball—Used with winding shaft—Package of 20				8060	Bracket—Output transformer mounting	
4422 Clutch—Tuning condenser drive clutch assembly—comprising drive shaft, balls, ring, spring and washers—assembled.  11262 Drive—Variable tuning condenser drive assembly  4520 Indicator—Station selector indicator pointer. Indicator—Band indicator pointer, arm, link and stud  Screw—No. 6-32-5/32" square set screw for band indicator operating arm—Package of 10.  4669 Screw—No. 8-32-5/32" set screw for variable condenser drive assembly—Package of 10.  Screw—No. 8-32-5/32" set screw for variable condenser drive assembly—Package of 10.  200 Coll—Field coil—L20.  Coil—Hum neutraizing coil—L21.  200 Cone—Reproducer cone—L22—Package of 5.  Connector—3-contact female connector plug for reproducer cable.  25 Connector—3-contact female connector plug for reproducer—Complete.  75 Transformer—Output transformer—T2.  75 Washer—"Binders board" "C" washer used to hold field coil assembly.  75 Name of 10.  75 Na		Dall—Steel ball—Used with winding shaft—	.28	11257	Clamp—Cone center suspension clamping	
Coil—Hum neutralizing coil—L21	4422	Package of 20	.25		Coil—Field coil— L20	2.00
11262 Dial—Dial scale  Drive—Variable tuning condenser drive assembly  1226 Indicator—Station selector indicator pointer. Indicator—Band indicator pointer, arm, link and stud  Screw—No. 6-32-5/32" square set screw for band indicator operating arm—Package of 10.  4669 Screw—No. 8-32-5/32" set screw for variable condenser drive assembly—Package able condenser drive assembly—Package of 10.  1.00	4477	sembly—comprising drive shaft halls			Cone—Reproducer cone—L22—Package of	.30
11252 Drive—Variable tuning condenser drive assembly 1.88 1.88 1.88 1.82 1.88 1.88 1.88 1.88	11262	ring, spring and washers—assembled		8110	5	3.85
4520 Indicator—Station selector indicator pointer. Indicator—Band indicator pointer assembly comprising indicator pointer, arm, link and stud  Screw—No. 6-32-5/32" square set screw for band indicator operating arm—Package of 10.  Screw—No. 8-32-5/32" set screw for variable condenser drive assembly—Package able condenser drive assembly—Package able condenser drive assembly—Package		Drive—Variable tuning condenser drive	.60		producer	25
Indicator—Band indicator pointer assembly comprising indicator pointer, arm, link and stud	4520	assembly		5119	Connector—3 contact female connector plug	
comprising indicator pointer, arm, link and stud		Indicator—Station selector indicator pointer.	.18	9619	Reproducer—Complete	.25
3993 Screw—No. 6-32-5/32" square set screw for band indicator operating arm—Package of 10	anesan	comprising indicator pointer, arm link		11253	Transformer—Output transformer—T2	
band indicator operating arm—Package of 10	3002	and stud	.20	11230	Washer—"Binders board" "C" washer used	1.70
able condenser drive assembly—Package	3773	band indicator operating arm—Package			to hold field coil assembly	.18
able condenser drive assembly—Package	4669	Screw—No. 8-32-5/32" set screw for varie	.25			
of 10		able condenser drive assembly—Package	over some	Pinner and Annual Annua		
		of 10	.25	STATE OF THE PERSON NAMED IN COLUMN NAMED IN C		