RCA Victor R-28-BW

INSTALLATION

Preliminary—After unpacking the instrument, remove the interior packing material used to protect the Radiotrons during shipment. Refer to the tube location diagram on the license label inside the cabinet, and make certain:

- (a) That all tubes are in the proper sockets and pressed down firmly. Never apply power to the instrument unless all Radiotrons are in place.
- (b) That all shields are rigidly in place over the Radiotrons shown by double circles on the diagram.
- (e) That the spring connectors at the ends of the short flexible leads are securely attached to the dome terminals of the proper Radiotrons as indicated on the diagram.

Location—The instrument should be located close to the antenna lead-in and ground connections, and near an electrical outlet.

Antenna and Ground—An antenna 25 to 75 feet long, including the lead-in and ground connections, is recommended. The antenna should be well insulated from all objects, and should not be run close to or parallel with electric circuits inside or outside the building. Generally, an indoor antenna of short or medium length should be found satis-

factory. An outdoor antenna of greater length may provide some increase in the receiving range, and is recommended for localities remote from broadcasting stations. When the receiver is installed in a building of metallic construction, an outdoor antenna is essential for satisfactory results.

A good ground connection is necessary for best performance of this receiver. The connection to ground should be as short and direct as possible. If the ground connection cannot be made to a cold water pipe, a metal stake driven from 4 to 6 feet into moist earth is recommended. An approved ground clamp should be used to insure a tight and permanent connection.

Two flexible leads are provided at the rear of the receiver for connecting to the antenna and ground. Connect the black lead to the antenna wire or lead-in and the yellow lead to the ground wire. Both connections should be soldered and wrapped with insulating tape.

Power Supply—Connect the power cord to an electrical outlet supplying alternating current at the voltage and frequency (cycles) specified on the license label.

OPERATION

The instrument has three operating controls, located on the right-hand side of the cabinet, as follows:

- Volume Control (Combined with Power Switch) (Uppermost Knob)—In the extreme counter-clockwise position the power switch is "off." Rotating the knob slightly clockwise turns on the power—further rotation increases the volume.
- (2) Tone Range Switch (Middle Knob)—This switch has two positions. The counter-clockwise position gives full range reproduction. In the clockwise position, highfrequency (treble) response is decreased; also in this position, static interference (when present) is reduced.
- (3) Station Selector (Lowest Knob)—This control is equipped with an illuminated dial, graduated in kilocycles to facilitate location and identification of stations.

To operate the receiver, proceed as follows:

- 1. Turn on the power and set the Volume Control fully clockwise for maximum volume.
- 2. Allow approximately one-half minute for the tubes to heat, then turn the Station Selector slowly over the range of the dial until a desirable station program is heard.
- 3. For best reproduction reduce the Volume Control setting and adjust the Station Selector accurately for loudest volume. Always use the Volume Control—never the Station Selector—for regulation of volume.
- 4. Set the Tone Range Switch for the preferred tone quality.
- 5. When through operating, turn the Volume Control knob fully counter-clockwise until the "off" click of the power switch is heard.

SERVICE DATA

Voltage Rating	$\dots\dots\dots105125\ Volts$
Frequency Rating25	-40 Cycles and 50-60 Cycles
Power Consumption	70 Watts
Number and Types of Radiotror 1 RCA-2A5, 1 RCA-58, 1 RC	as1 UX-280, CA-57, 1 RCA-2A7—Total, 5
Undistorted Output	1.75 Watts
Frequency Range	540 K. C. to 1500 K. C.

This receiver is a five-tube Super-Heterodyne incorporating a Dynamic Loudspeaker as a part of the chassis; two-point tone control; single heater type Pentode Output and the inherent sensitivity, selectivity and tone quality of the Super-Heterodyne.

The circuit consists of an R. F. stage, a combined oscillator and first detector in the RCA-2A7 tube, an intermediate stage consisting of a transformer only using two tuned circuits, a second detector, an output tube and a rectifier.

Service work in conjunction with this receiver will be similar to that of other Super-Heterodyne receivers of the small compact type construction. The line-up adjustments are made in conjunction with an external oscillator and an output meter. The line-up capacitors on the gang capacitor are adjusted for maximum output when the oscillator is coupled to the antenna and the set and oscillator are both set at 1400 K. C. The I. F. frequency is 175 K. C. and the two circuits that comprise it are adjusted for maximum output at 175 K. C.

RADIOTRON SOCKET VOLTAGES 115 Volt A. C. Line

MAXIMUM VOLUME CONTROL SETTING-NO SIGNAL

Radiotron No.	Cathode to Control Grid, Volts	Cathode to Screen Grid, Volts	Cathode to Plate, Volts	Plate Current, M. A.	Heater Volts			
1. RCA-58 R. F. Amplifier	3.0	95	250	5.0	2.33			
2. RCA-2A7 First Detector Oscillator	3.0	95	250	3.0	2.33			
3. RCA-57 Second Detector	6,0	89	170	0.3	2.33			
4. RCA-2A5 Power Amplifier	18.0	235	220	32.0	2.33			
5. RCA-80 Rectifier	725 Volts PLATE TO PLATE-60 M. A. TOTAL							
TOTAL CATHODE CURRENT—11 M. A.								

REPLACEMENT PARTS

Insist on genuine factory tested parts, which are readily identified and may be purchased from authorized dealers.

Stock No.	DESCRIPTION	List Price	Stock No.	DESCRIPTION	List Price
2747 2749 3050 3456 3459 3472 3514 3555 3572 3573 3574 3586 3587 3588 3589 3592 3593 3594	RECEIVER ASSEMBLIES Contact cap—Package of 5. Capacitor—2,400 mmfd. Resistor—14,000 ohms—Carbon type—3 watts. Capacitor—0.05 mfd. Capacitor—0.0024 mfd. Resistor—250,000 ohms—Carbon type—½ watt—Package of 5. Capacitor—0.1 mfd. Socket—Radiotron 7 contact socket. Socket—Radiotron 4 contact socket. Coil—Choke coil Ring—R. F. or oscillator coil retaining ring—Package of 5. Scale—Dial scale. Socket—Dial lamp socket and bracket. Volume control—Complete with mounting nut. Switch—Tone control switch. Knob—Station selector, operating switch or volume control knob—Package of 5. Screw—Chassis mounting screw—Package of 10. Resistor—50,000 ohms—Carbon type—½ watt—Package of 5. Capacitor—60 mmfd. Capacitor—60 mmfd.	.35 .25 .44 .42 .32 1.00 .36 .38 .32 .68 .40 .50 .32 1.40 .54 .80 .30	3605 3606 6143 6228 6303 6306 6443 6464 6470 6471 6472 7485 7487 7589 7592 8985 8986	Capacitor—770 mmfd. Capacitor—Comprising one 0.005 mfd. and one .025 mfd. capacitors. Resistor—40,000 ohms—Carbon type—½ watt—Package of 5. Resistor—200,000 ohms—Carbon type—½ watt—Package of 5. Resistor—20,000 ohms—Carbon type—½ watt—Package of 5. Resistor—14,000 ohms—Carbon type—1 watt—Package of 5. Capacitor—10 mfd. Transformer—I. F. transformer. Coil—Antenna coil. Coil—Oscillator coil assembly. Coil—R. F. coil assembly. Socket—Radiotron 6 contact socket. Shield—Radiotron tube shield. Capacitor—Filter capacitor—Two 4.0 mfd. in container Condenser—3 gang variable tuning condenser. Transformer—Power transformer—105-125 volts—50-60 cycles. Transformer—Power transformer—200-250 volts—60 cycles.	\$0.30 .40 1.00 1.00 1.00 1.10 1.50 1.88 1.08 .74 .94 .40 .25 1.64 3.35 4.26 4.38 6.00
3601 3602 3603 3604	Capacitor—0.1 mfd. Coil—Choke coil. Resistor—60,000 ohms—Carbon type—¼ watt—Package of 5. Resistor—500 ohms—Carbon type—1 watt—Package of 5. Capacitor—400 mmfd.	.68 1.00	6467 8987 9004	REPRODUCER ASSEMBLIES Transformer—Output transformer. Cone—Reproducer cone—Package of 5. Coil assembly—Comprising field coil, magnet and cone support.	1.44 5.00 2.35

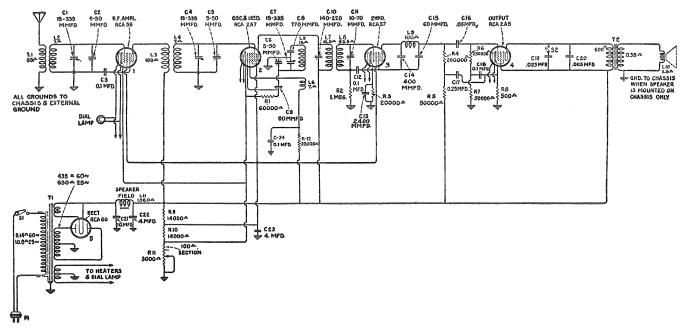


Figure 1—Schematic Circuit Diagram

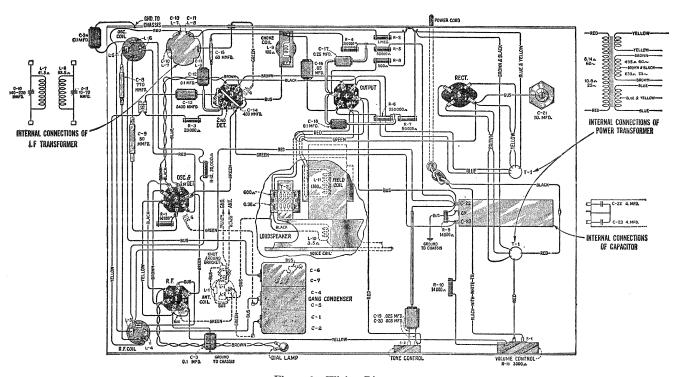


Figure 2—Wiring Diagram



REG. U. S. PAT. OFF.

RCA Victor Company, Inc.

CAMDEN, N. J., U. S. A.